HEAT PUMP DRYER

Model:

HHPD-HMK80IVFC+++



- Heat pump dryer
  - 8 kg
- Energy class: C

1. INTRODUCTION

Please read the instructions carefully and keep the manual for future information.

This manual is designed to give all necessary instructions concerning installation, use and maintenance of the unit. In order to operate the unit correctly and safely, please read this instruction manual carefully before installation and use.

2. CONTENT OF YOUR PACKAGE

- ➔ **Tumble dryer**
- ➔ **User manual**
- ➔ **Warranty certificate**

3. SAFETY WARNINGS AND PRECAUTIONS

General

- Carefully read the instructions for use before using the dryer.
- Please, do not use the dryer without reading and understanding these instructions for use first.
- These instructions for use of a dryer are supplied with different types or models of dryers. Therefore, they may include descriptions of settings or equipment that are not available in your dryer.
- Failure to observe the instructions for use or inappropriate use of the dryer may result in damage to the laundry or the appliance, or injury to the user. Keep the instruction manual handy, near the dryer.
- Your dryer is intended solely for household use. If the dryer is used for professional, for-profit purpose or purpose exceeding normal use in a household, or if the dryer is used by a person who is not a consumer, the warranty period shall be equal to the shortest warranty period required by relevant legislation.
- Follow the instructions for the correct installation of the dryer and connection to the power mains.
- For appliances with ventilation openings in the base, a carpet must not obstruct the openings.
- The appliance must not be installed behind a lockable door, a sliding door or door with a hinge on the opposite side to that of the tumble dryer, in such a way that the full opening of the tumble dryer door is restricted.
- All and any repairs or maintenance tasks on the dryer should only be done by trained experts. Unprofessional repair may result in an accident or major malfunction.
- To avoid danger, a damaged power cord may only be replaced by the manufacturer, a service technician, or an authorized person.
- After installation, the dryer should stand still for two hours before it is connected to the power mains.
- At least two people are required to install the tumble dryer on top of a washing machine.
- Install the dryer in a room with adequate ventilation and a temperature between 10 °C and 25 °C.
- Always use the ducts or hoses supplied with the dryer.
- Place the dryer on a level and stable solid (concrete) base.

- Do not place the dryer behind lockable or sliding door, or door with a hinge on the opposite side of the dryer door hinge. Install the dryer in such way that the door can always be freely opened.
- Never block the air exhaust (evacuation opening).
  Do not place the dryer on a carpet with long fibres as this may impede air circulation.
- Air in the dryer environment should not contain dust particles.
- The appliance may not be in contact with a wall or adjacent furniture.
  This appliance must not be stored or used in any outdoor location.
- That adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.

Electrical safety

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The dryer may not be connected to the power mains using an extension cord.
- Do not connect the tumble dryer to an electrical outlet intended for an electric shaver or a hair dryer.
- The dryer is protected with an automatic switch-off system in case of overheating. This system will switch off the dryer if the temperature is too high.
- If the net filter is clogged, the overheating automatic switch-off system may be activated. Clean the filter, wait for the dryer to cool down, and try running it again. If the dryer still fails to start, call a service technician.
- Do not use multiple outlet sockets, an extension power cable or double adapter with this appliance.
- This appliance must be earthed via the power cord. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current.
- Improper connection of the equipment-grounding conductor can result in risk of electric shock. Check with qualified electrician or service personnel if you are in doubt as to whether the appliance is properly grounded.
- This appliance is equipped with a power cord having an equipment-grounding earthing pin and a grounding power plug. The power plug must be plugged into an appropriate outlet socket that is installed and grounded in accordance with all local codes and ordinances.
- Never unplug the appliance by pulling on the power cable. Always grip the power plug firmly and pull straight out from the outlet socket.
- Do not spray water inside or outside the appliance to clean it.
- The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- There is a risk of electric shock as the dryer is operated with electricity.
- Check the dryer for visible damage.
- You must not operate the dryer if it is damaged.
- Before connecting the dryer to the power supply, ensure that the electric voltage specified on the rating plate matches the voltage of your socket.
- Only use residual current circuit breakers with the following symbol.
- Ensure that the mains cable is not kinked or trapped, and it does not come into contact with heat sources or sharp edges.

Children safety

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision

or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision.

- Children of less than 3 years should be kept away unless continuously supervised.
- Prevent your children and pets from entering the dryer drum.
- Before closing the dryer, door and running the programme, make sure there is nothing except laundry in the drum (e.g. if a child climbed into the dryer drum and closed the door from the inside).
- Do not leave the appliance door open. Children may hang on the door or crawl inside the appliance, causing damage or injury.

Use


- The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
- The lint trap has to be cleaned frequently.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- Remove all objects from pockets such as lighters and matches.
- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.
- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard.
- In case of a defect, only use approved spare parts by authorized manufacturers.
- If the condensate tube is blocked or clogged, then tumble dryer operation is stopped.
- Before moving the dryer or before storing it in a non-heated room during the winter, the condensate tank has to be emptied.
- Clean the dryer filters after each drying cycle. If you have removed the filters, replace them before the next drying cycle.
- Do not use any solvents or cleaning agents that could damage the dryer.
- Never add chemicals or fragrances into the condensate tank.
- After the drying process, unplug the dryer power cord from the power outlet.
- The dryer uses a heat pump system to heat the air.
- The system consists of a compressor and a heat exchanger. When the dryer is started, compressor operation (the sound of flowing liquid) or flow of refrigerant may be louder as long as the compressor operates. This is not a sign of malfunction, and it will not affect useful life of the dryer. Intime and with use of the dryer this noise will become quieter.
- Do not drink or prepare food with condensed water/distilled water. It can cause health problems to people and pets.
- Remove clothes from the product immediately when drying is complete or the power is turned off during the drying process. Leaving clothes that has been dried in the appliance unattended could result in fire. Clothes not removed from the appliance after drying could result in fire. Remove clothes immediately after drying, and then hang or lay the clothes flat to cool.
- Never attempt to operate the appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug.

- Do not attempt to separate any panels or disassemble the appliance. Do not apply any sharp objects to the control panel in order to operate the appliance.
- Never reach into the appliance while it is operating. Wait until the drum has completely stopped.
- In case of flood, disconnect the power plug and contact the After-sales Service Centre.
- Do not push down on the door when the appliance door is open.
- Do not touch the power plug or the appliance controls with wet hands.
- Do not bend the power cable excessively or place a heavy object on it.
- Lint must not be allowed to accumulate around the tumble dryer.
- Keep the area underneath and around the appliance free of combustible materials such as fibres, paper, rags, chemicals, etc.
- As the dryer is heavy, you could injure yourself by trying to lift it. Do not lift the dryer on your own.
- You could cut your hands on the sharp edges of the dryer. Do not hold the dryer by the sharp edges.
- Protruding parts on the dryer may break off when it is lifted or pushed.
- Do not move the dryer by holding onto protruding parts.
- Check the dryer for damage caused during transportation. Never operate a dryer if it is damaged.
- Any residual water in the dryer may freeze and damage the dryer.
- Do not install the dryer in rooms that are at risk of frost.
- The appliance contains refrigerant which although it is environmentally friendly, is flammable R290. Failure to dispose of it properly may result in a fire or poisoning. Dispose of the appliance properly and do not damage the pipes in the refrigerant circuit.

WARNING: Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
WARNING: In the appliance enclosure or in the built-in structure, keep ventilation openings clear of obstruction.

- At higher drying temperatures, the door glass will heat up. Be careful to avoid burns. Make sure children do not play near the door glass.
- The back of the dryer may get very hot during operation. Wait for the dryer to cool down completely before touching its back side.
- If you open the dryer door during the drying process, the clothes may be very hot and there is a risk of burning.


4. PRODUCT DESCRIPTION

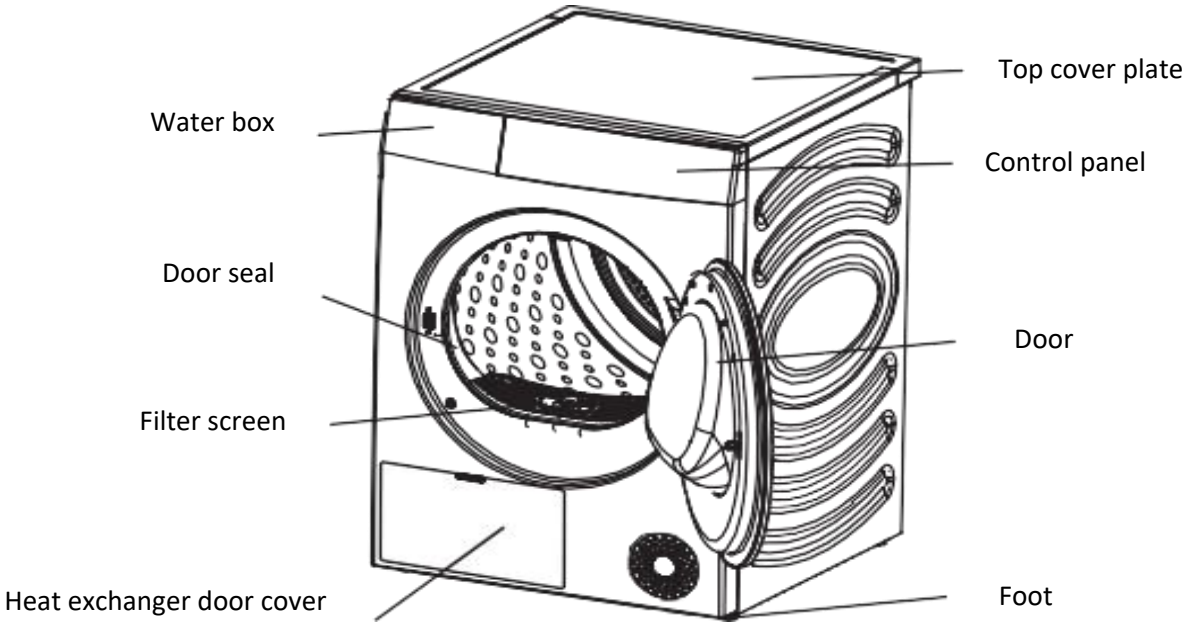

Accessories



User manual

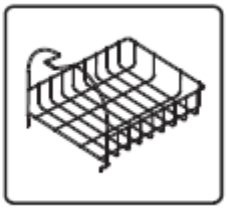

Drying rack



Drainpipe

5. INSTALLATION

- The clothes dryer must be properly installed by qualified professionals to ensure use safety.
- The user shall be responsible for the service caused by poor and incorrect installation

Precautions before installation

Installation environment

- It is recommended to be installed in an embedded space, please reserve the minimum installation clearance for the dryer: 25 mm at the top, 20 mm at the left and right sides and 50 mm at the back.


Installation requirements

- Please install the dryer in a dry and well-ventilated place with flat and solid ground. Do not place it on carpet, cardboard, or place with direct sunlight.
- The working environment temperature of the dryer is 5 °C – 35 °C. Do not place it below 0 °C or at a high temperature. The appliance performs best at a room temperature of 23 °C.
- During handling, the inclination angle of the dryer shall not exceed 45°; after handling, it needs to stand for more than 2 hours.
- The dryer shall not be placed next to the oven, stove and other high-temperature equipment, nor next to the refrigeration equipment. The back of the dryer must be well ventilated.
- It is recommended that the clothes dryer and washing machine be placed close to each other to facilitate clothes dehydration after washing dehydration.
- Install the appliance on a flat hard floor. Allowable slope under the appliance is 1 degree.

Adjustable foot

- Press the diagonal on the top of the dryer to confirm whether the dryer is in a stable state.
- If the dryer shakes, rotate the four adjustable feet at the bottom to adjust them to the appropriate height to ensure that the dryer is in a stable state.
- Never try to correct any unevenness in the floor with pieces of wood, cardboard or similar materials under the appliance.




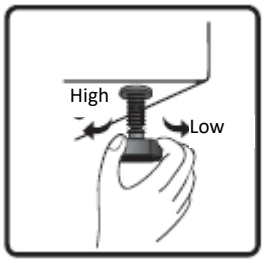

Installation of the drainpipe

- Usually, the condensate water after drying is stored in the water box, and the water box needs to be emptied after each program. If the installation position of the dryer is close to the sewer, or the clothes dryer is stacked on the washing machine, the attached drainpipe can be installed to discharge the water directly to the sewer.


- Remove the connecting pipe at the rear of the water box and install the drainpipe among the attached accessories to this position (as shown in the figure). Please confirm that the installation connector is firmly connected.

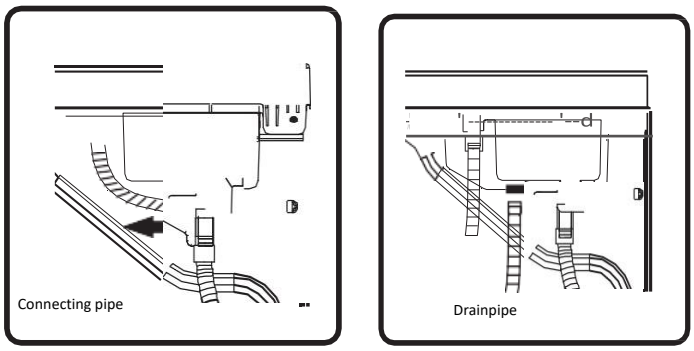

- Please insert the other end of the drainpipe into the floor drain without twisting or flattening. If the pipe is too long, please cut off the excess part.
- The drainpipe shall not be higher than the dryer, otherwise the water cannot be drained.
- Do not place the drain in accumulated water, which may cause back suction.
- After the drainpipe is installed in place, the condensate water can be discharged directly without emptying the water box after each use.

Drying rack

- When drying shoes and plush toys, etc., or selecting rack dry, the drying rack can be used.
- When drying clothes, please take out the drying rack.
- Installation of drying rack: Please tilt the drying rack to a certain angle with the lower end clamped in the two holes of the filter screen and the upper end hooked in the slot of the front support.

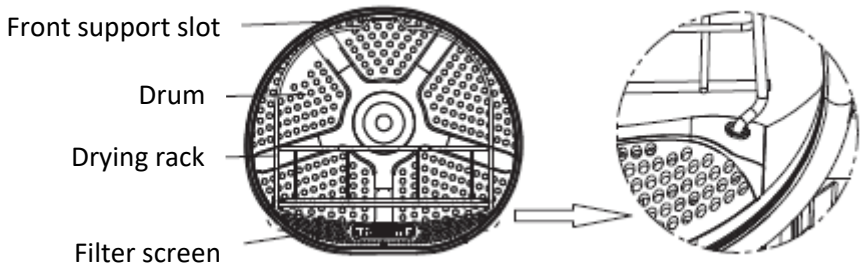

Power supply connection

- Ensure that the power supply is consistent with the power requirements of the dryer.
- The dryer must be grounded reliably.
- Do not use a power strip or multi-purpose socket for secondary connection.


NOTE: Always unplug the appliance after use.

Stacked installation

- The dryer can be stacked with a washing machine with 486 mm side plate of the box.
- When stacking, it shall be fixed with accessories for stacking. Please contact qualified service personnel for installation.

- Without stacking accessories, the dryer and washing machine must not be stacked to avoid safety accidents.
- For safety reasons, two or more people need to work together to install. The weight of the appliance and the height of the installation makes the installation procedure too risky for one person.
- The surface on which the appliance is placed should be clean and level.
- The stack suit needs to be placed against the wall with a distance of 50-200 mm.

6. USING THE PRODUCT

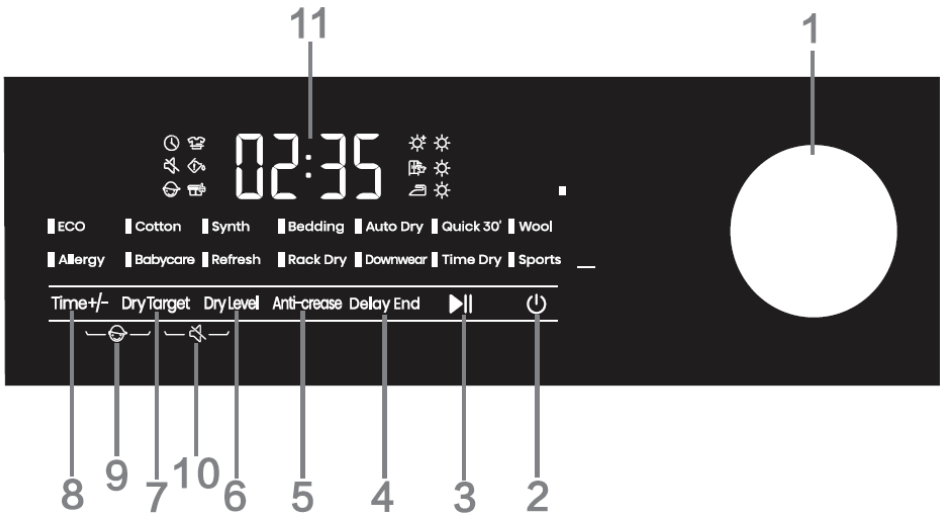

1. Knob

It is used for program selection

2. ON/OFF

Press to turn on/off the dryer

3. Start/Pause

Press the "Start/Pause" key to pause or start the program

4. Delay end

This function can delay the end time of the program.

Make an appointment after selecting program and functions. Press „Delay End” button to add or reduce the delay end time. The time changes by 1 h for each press, and the maximum optional time is 24 h

The delay end time is the end of the program, including the running time of the whole program, so the delay end time must be longer than the running rime of the program.

During the delay end process, the icon is lit up. After the delay end process ends, the delay end icon goes out.

Before the program starts, the selected delay end can be canceled by selecting other programs or function keys.

After the program is started, in case of canceling the delay end, shut down and restart the dryer.

5. Anti crease

If the clothes cannnot be taken out in time after drying, select the anti-crease function. At this time, the drum rotates intermittently to reduce clothes from creasing.

Touch any key or open the door to exit the anti-crease mode. If there is no operation, the longest execution will end automatically after 12 h by default.

When the icon is lit up, it indicates that the anti-crease function is enabled.

This function can be selected until the end of the drying process.

6. Dry Level

The dry level is divided into 3 levels, and the display shows 1-3 suns, which can be used to dry clothes according to the number and material of the clothes

7. Dry target

For selection of drying effect. The default option is [ ], and press the dry level key to select.

[ ] - Extra, means the clothes can be stored after drying.
[ ] - Cupboard, means the clothes can be worn immediately after drying
[ ] - Iron, means the clothes has small amount of water an can be ironed.

8. Time +/-

Before the program starts, this function can add or reduce drying time of the program.Press continuously to cycle through the set tap positions. Different programs have different tap position settings.

9. Child lock

In order to avoit children's misoperation and protect children's safety, this dryer is equipped with child lock. After the program is started, press and hold „Time+/- and Dry target" simultaneousely, the child lock will be enabled and the child lock icon will lit up. The child lock can be released by the same operation.

After the child lock function is set, other function keys are locked. In case of program ends or restart after power-off, the child lock function set remains.

After the child lock function is enabled: press the „start pause" key to cancel the prompt in case of prompt for lint and debris cleaning. During running in anti crease mode, the child lock needs to be released manually, and the anti crease function ends automatically.

10. Mute

It is used to turn on/off the beel, except the alarm tone.

After standby or startup, press and hold „dry target and dry level" key to turn on/off the mute function.

11.Display

It is used to display the remaining time, appointment time, fault code and other information of the program. The time displayed by the program may be different from the actual running time. Due to the influence of type of clothes, load the clothes, water content after dehydratation and ambient temperature, the actual time drying will be automatically adjusted.

When the program ends, „End" will be displayed

Drum light

This dryer is equipped with a drum light. In the states of standby, operation (rotate the knob, press any key or open the door), pause, and program ends, the drum light will automatically illuminate for 1 minute and the turn off automatically, so the drum interior can be seen.

Stop when the clothes are dry.

This dryer stops whtn the clothes are dry. When the load of clothes is small, it is likely that the program is not completed but the clothes have been dried, at this time, the program will end automatically to save energy.

Program table

Programs	Description	Maximum capacity
Cotton	Use this program for thicker non-sensitive cotton laundry of approximately the same thickness. After drying, it will be dry.	8 kg
Synth	The program is used for drying delicate laundry made of synthetics fibres.	4 kg
ECO	Use this program for drying of ordinary cotton clothes	8 kg
Bedding	Use the program for larger items. When the program is complete they will be dry. Adjusted drum rotation prevents the laundry from tangling.	2.5 kg
Down wear	Use this programme to dry textiles stuffed or padded with down (pillows, duvets, jackets etc.). Dry large items separately and use the Extra Dry function or the Time Programme if necessary.	2 kg
Sports	Use this programme for clothing with a membrane, for sportswear made of mixed materials and breathable fabrics.	2 kg
Auto Dry	Use this program for thicker non-sensitive cotton laundry of approximately the same thickness. After drying, it will be dry or slightly moist.	4 kg
Baby care	Use this programme to dry baby clothes. Clothes dried with this programme are usually normally dry	2 kg
Allergy	For removing allergens such as mites	2 kg
Quick 30’	For quick drying of light and thin clothes.	0.5 kg
Refresh	In this programme, the heater is switched off. The programme is suitable for refreshing your laundry.	/
Wool	This short program is intended for softening or fluffing of clothes made of wool and silk which have to be dried thoroughly according to manufacture's instructions.	1 kg
Rack dry	When using this program, you can place the load to be dried (e.g., small stuffed animals, sneakers, etc.) on the drying rack for drying	/
Time dry	Use this programme for non-sensitive laundry that is still slightly moist and has to be thoroughly dried. In the time programme, remaining moisture is not detected automatically. If the laundry is still damp after the program is complete, repeat the programme; if it is too dry and therefore creased and rough to touch, the drying time you selected was too long	/

Tips for clothes drying

- Clothes must be dehydrated before being put into the dryer. In order to save energy, please increase the dehydration speed of washing machine to above 1000 rpm.
- Please shake the dehydrated clothes up before putting them into the dryer.
- In order to achieve ideal drying effect, please classify the clothes by types and select the appropriate drying program. Each program has its maximum load requirements, and do not overload.
- After drying clothes, clean the lint and debris filter screen in time.
- When drying a small amount of clothes, it is recommended to use a timer program.
- Do not dry the starched clothes, because the hardening of the starch layer will reduce the drying effect.
- Clothes that are easy to fade should be dried separately.
- A mixed fabric load can cause the drying time to be extended and the time remaining in the display to pause during active drying. The remaining time will then continue when it is the actual time that remains.

Preparation before clothes drying

- Before drying, please check the clothing tab to confirm whether it is suitable for drying.
- Empty your pockets and take out coins, pins, keys and other items to avoid clothing damage.
- Zip up the zipper, button up the buttons and tighten the belt. In order to avoid the sound of zippers and buttons during drying, please turn the clothes over before putting them into the dryer.
- Check whether the water box is drained off and whether the lint and debris filter has been cleaned and installed in place.

NOTE

- The drying time of clothes will be automatically adjusted according to the following factors:
- type of clothes, load of clothes, water content after dehydration, and ambient temperature.
- Please be sure to check the clothing tag to ensure that the clothes can be dried to avoid damage to the clothes.
- Drying clothes with different textures and thicknesses at the same time will have different drying effects.
- Users can choose the appropriate program according to their habits. If the clothes are not completely dried, additional drying of timer program can be selected.
- When drying large fabrics such as bed sheets and quilt covers, due to large load, they may be wrapped into clusters, affecting the drying effect. Please take them out and shake them up before putting them into the dryer to continue drying.
- When drying down clothes, please turn out the inner side of the clothes before drying.

7. CLEANING AND MAINTENANCE

Regular maintenance can prolong the service life of the dryer. Be sure to cut off the power supply before maintenance.

Exterior of the dryer


- Clean with a soft wet cloth and wipe the body surface with a non-corrosive household cleaner.
- Then, dry it with a soft dry cloth.


Door seal

- Check the door seal regularly and clean it with wet cloth if necessary.
- After use, open the door slightly for ventilation and drying.

Clean the lint and debris filter screen

- Excessive fluff accumulated on the filter screen will affect the drying effect. Please clean the filter screen after each use.
- After cleaning, be sure to reinstall the filter screen in place before use.

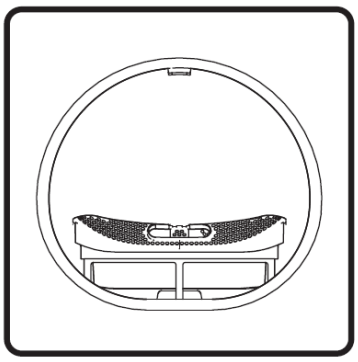

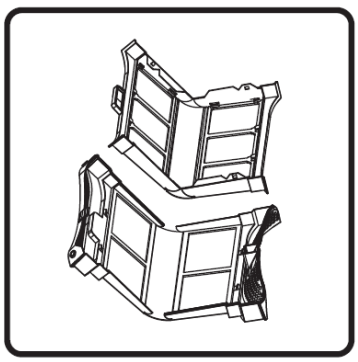

1. Open the door and take out the filter screen from the front support.
2. Open the filter screen and clean the fluff of the two-layer filter screen with a wet towel or flowing water.






3. After drying the filter screen, reassemble it.
4. Install the filter screen to the front support.


Notes:

- There is a temperature sensor at the bottom of the front support. After the lint and debris filter screen is taken out, please be careful not to touch it to avoid scratching.
- When reinstalling the filter screen, install in the correct direction and at the correct position.
- Do not use this dryer when the filter screen is not installed correctly.

Cleaning of water box

- If the drainpipe is not installed, the condensate water after drying is stored in the water box. Please drain it off it in time after program ends.
- During running, if the water box is full, on the display flashes for prompt, please empty the water box immediately.
- The condensate water is not edible.

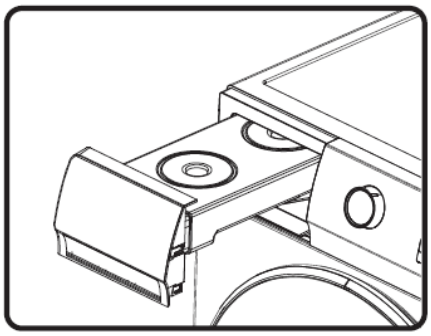


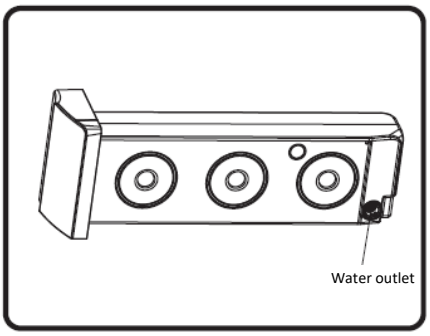



- Take out the water box horizontally to avoid spillover of condensate water.
- Dump the condensate water and reinstall the water box in place.

Cleaning of heat exchanger

Please clean the heat exchanger regularly, otherwise the performance of the dryer will be affected.

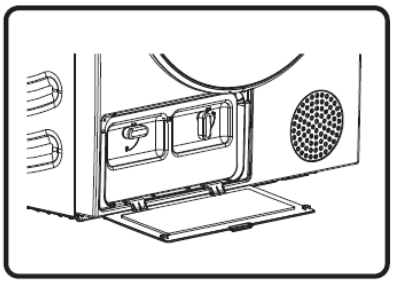

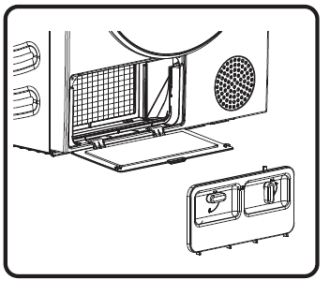

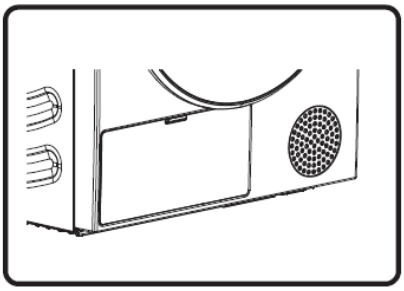

1. Press the buckle of the heat exchanger door cover at the lower left to open the door cover.
2. Turn the locking knob of the base filter cover to unlock position.

After using for a period of time, if there is dust on the heat exchanger, please remove the dust with tools. Do not touch the heat exchanger directly with your hands to avoid injury.
3. Install the cleaned filter and filter cover back to the original positions, lock the knob and close the heat exchanger door cover

8. TROUBLESHOOTING

When the machine fails to operate normally, it may not be a fault. Please refer to the following methods for troubleshooting. If the fault still exists after self handling according to the recommended method, please unplug the power supply and contact us for after-sales service.

Problem	Recommended handling method
The dryer cannot be started	*Check the power connection. *Confirm the "Start Pause" key is pressed down. *Confirm the door is closed properly. *House fuse is blown, circuit breaker has tripped, or power outage has occurred.
The dryer cannot be started and displays “End”	*Check whether the program setting is correct. *Confirm there are clothes in the drum.
Excessive drying time	*Check whether the program setting is correct. *Confirm whether there are too many clothes wrapping into clusters. *Check whether the filter screen is cleaned. *There will be air supply for cooling after drying in some programs.
Poor drying effect	*Confirm that the clothes have been dehydrated. *Check whether the program setting is correct. Confirm that there are too many clothes. *Load is not properly sorted. Whether clothes that are not easy to dry are mixed with clothes that are easy to dry. *Large load of heavy fabrics. *Check whether the filter screen is cleaned.
The remaining time of the display stops or jumps	*The remaining time varies with clothing type, load, dehydration and ambient temperature, which is a normal phenomenon.
Clothes are wrinkled	*Clothes have dried too long. Try a shorter drying time. *Clothes have been left in the appliance for too long after cycle ends.
The dryer is too loud	*Look for coins, loose buttons, nails, and other objects and remove them immediately. *Check the lint filter. Remove any items stuck inside the lint filter. *Make sure the dryer is level and standing firmly on the floor. *The dryer may hum due to air moving through the drum and fan. This is normal.

Problem	Recommended handling method
Clothes are shrinking.	*Garment care instructions are not being followed. Use a low or no heat setting
Lint is left on clothes.	*Lint filter has not been cleaned properly. *Clothes have not been sorted properly. *Some fabrics cause more lint and should be dried separately from fabrics that lint attaches easily. *Tissue, paper, etc., has been left in pockets.
The appliance has an odour.	*The smell is caused by rubber material that is attached to the appliance inside. This kind of smell is a rubber's own smell and disappears automatically after using the appliance several times.

	*When washing the clothes, use the detergent in accordance with the manufacturer's recommendations. If you use the detergent excessively not according to the recommendations, undissolved detergent may accumulate on the clothes and cause an odour. *You can smell odours from the clothes if the clothes were left in the appliance after drying or in the washing machine after washing. Unload the clothes promptly at the end of the drying or washing cycle. *Ensure you can smell same odour in the washing machine. If so, clean the tub of the washing machine referring to the washing machine user manual. *Always take care of both lint filters clean. If any residues were left in the lint filter after drying, it may cause odours. And also dry the lint filter completely after cleaning.
The machine is powered on and started directly after power failure but does not work.	*When the program is suspended, the set functions cannot be changed. If the program or function needs to be changed during operation, or the power is off during operation and the power needs to be powered on again, turn the knob to "Off', then turn the knob again to select the required program and function, and finally start it.


Error codes

Code	Problem	Recommended handling method
F50/F51	Abnormal sensor	*Please contact the authorized service
F22	Abnormal display the motor control and the power board	*Press the Power for 3 seconds, and press the "start/pause" button again *If the problem is not removed, please contact the authorized service.
F21	Abnormal display panel and the power board	*Rotate the knob to "OFF" to shut down the dryer, and restart it after 10 seconds *If the problem is not removed, please contact the authorized service.

Technical data

Product	HHPD-HMK80IVFC+++
Colour	220-240V – 50Hz
Rated capacity	8 kg
Rated power	650 W
Net weight	45 kg
Refrigerant	R290
Charge	110 g

Dimensions	A	595 mm
	B	845 mm
	C	500 mm
	D	550 mm
	E	580 mm
	F	1070 mm

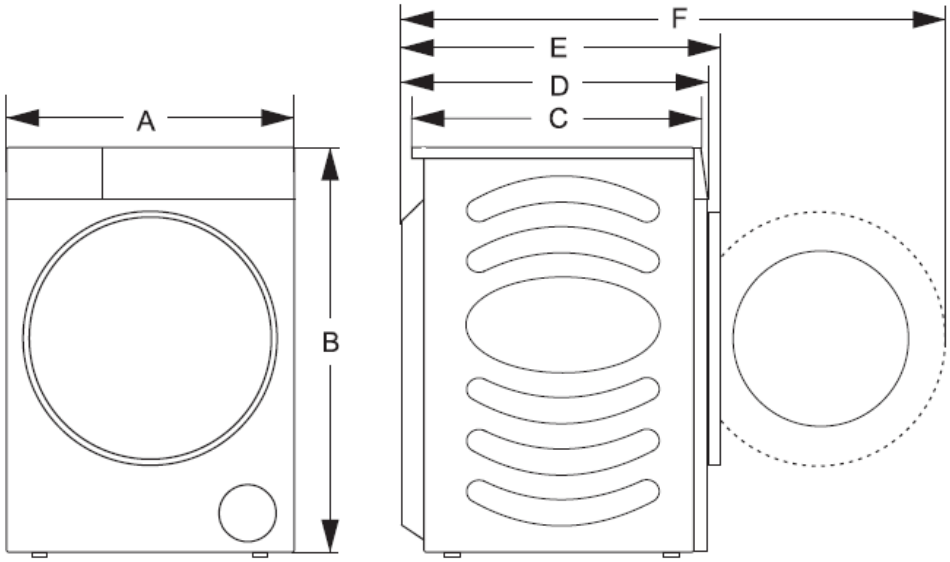

Programme Instructions

The table indicates the power consumption and time values for drying of a test batch of laundry with various loads and after washing machine spinning .

The following requirements apply to the consumption values specifed below.

1.The values given for programs other than the Eco program are indicative only;

2.Results of Wool program is based on wool load with 5% initial moisture content.

3.The Eco program is suitable to dry wet cotton laundry, and that this program is used to assess the compliance with the EU ecodesign legislation.

4.The Eco program is the most efficient program in terms of energy consumption for drying wet cotton laundry.

5.Loading the household tumble dryer up to the maximum capacity indicated by the manufacturer for the respective programs will contribute to energy savings.

6.At full load of Eco pogram， acoustic airborne noise emission of the drying cycle: 64dB.

7.The product information and QR code are reflected in the energy consumption labelthe product registration information can be obtained by scanning the QR code.

8.The power consumption of the off-mode is 0.5W. Time on switching automatically to off-mode ： 10min.

Program	Rated Capacity	Spinning (rpm)	Program consumption (kWh/cycle)	Program duration (h:m)	Final moisture content (%)
Eco	8	/	1.55	03:18	0.5
Synth	4	1000	0.74	01:31	0.5
Cotton	8	1000	1.84	03:47	0.5
Wool	1	/	0.63	01:30	0.5

Due to deviations in terms of type and amount of laundry, spinning, power supply oscillation, and environment temperature and humidity, the values measured at the user may di□□er from the one stated in the table.

CUSTOMER CARE AND SERVICE

Always use original spare parts.

When contacting our Authorised Service Centre, ensure that you have the following data available: Model and Serial Number.

The information can be found on the rating plate. Subject to change without notice.

The technical information is situated in the rating plate on the internal side of the appliance and on the energy label.

The QR code on the energy label supplied with the appliance provides a web link to the information related to the performance of the appliance in the EU EPREL database.

Keep the energy label for reference together with the user manual and all other documents provided with this appliance.

It is also possible to find the same information in EPREL using the link https:// eprel.ec.europa.eu and the model name and product number that you find on the rating plate of the appliance.

To access information about your product in the EPREL portal, you can scan the codes below:

Thank you for purchasing this product. If you need support with your product, visit our website using the links below.

Get User manuals: https://www.heinner.ro

Get Service information: https://www.heinner.ro

Environment friendly disposal

You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipment's to an appropriate waste disposal centre.

HEINNER is a registered trademark of **Network One Distribution SRL**. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from NETWORK ONE DISTRIBUTION.

Copyright © 2013 Network One Distribution. All rights reserved.

www.heinner.com, http://www.nod.ro

This product is in conformity with norms and standards of European Community

Importer and distributor: **Network One Distribution**

Marcel Iancu Street, 3-5, Bucharest, Romania

Tel: +40 21 211 18 56, www.heinner.com , www.nod.ro